

Package Contents

Contents included in the soaking basin box

SOAKING BASIN



Also Included in Soaking Basin Package




**Cartridge
Extractor Rod**



**Spare Filter
Cartridge**



Cartridge Stand

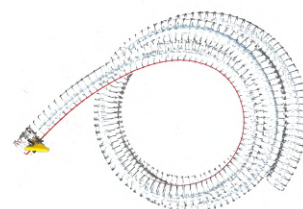

Draining Hose

Connect to the faucet at the bottom of the soaking basin for easy water drainage.

Cleaning the Cartridge

Routine cleaning instructions for the filter cartridge

Routine cartridge cleaning is the most important maintenance for the FLTM filter. A dirty cartridge restricts water flow, reduces filtration performance, and can damage the motor.

CLEAN ACCORDING TO YOUR MODEL

FLTM-10: every 10-20 tovlim
FLTM-75: every 50-75 tovlim
FLTM-150: every 100-150 tovlim
(Double Filter System: every 300 tovlim)
Or every 3 months, whichever comes first.

7 Steps to a Clean Cartridge

01 Remove the cartridge

Remove the cartridge from the Filter Body using the cartridge extractor rod, and place it on the cartridge cleaning stand as needed.

02 Rinse thoroughly

Rinse the cartridge membrane with a strong hose head - not a power washer - using hot water (40 C / 104 F, not boiling).

03 Clean between the pleats

Gently spread the pleats and clean between the folds. Rinse from top to bottom so debris drains away as you clean.

04 Prepare the soaking basin

Add hot water and pool cartridge cleaning solution. Follow the cleaner label for quantity and safety instructions.

05 Submerge the cartridge

Place the cartridge into the soaking basin and add hot water until the cartridge is completely submerged.

06 Allow it to soak

Soak according to the cleaning-solution instructions.

07 Rinse and return

Remove the cartridge, rinse thoroughly with hot water, and reinstall when clean.

If the pleats are not closing fully, use the cartridge ring to help reinsert the cartridge more easily.



Cartridge Ring (PVC)



Slide the cartridge ring onto the cartridge from the top down to the bottom to hold the pleats together.

Included in the filter package

Important Notes

- Do not allow a used cartridge to dry out completely. If it will not be reinstalled immediately, keep it in clean water.
- Cartridges are consumables and typically need replacement every 6-12 months, depending on use.
- Once every 1-2 months or after 5,000 tovlim, soak the cartridge in an appropriate descaling solution and follow the solution label.