




AnyGlide Chevy Tahoe Gorilla 16T Installation Instructions




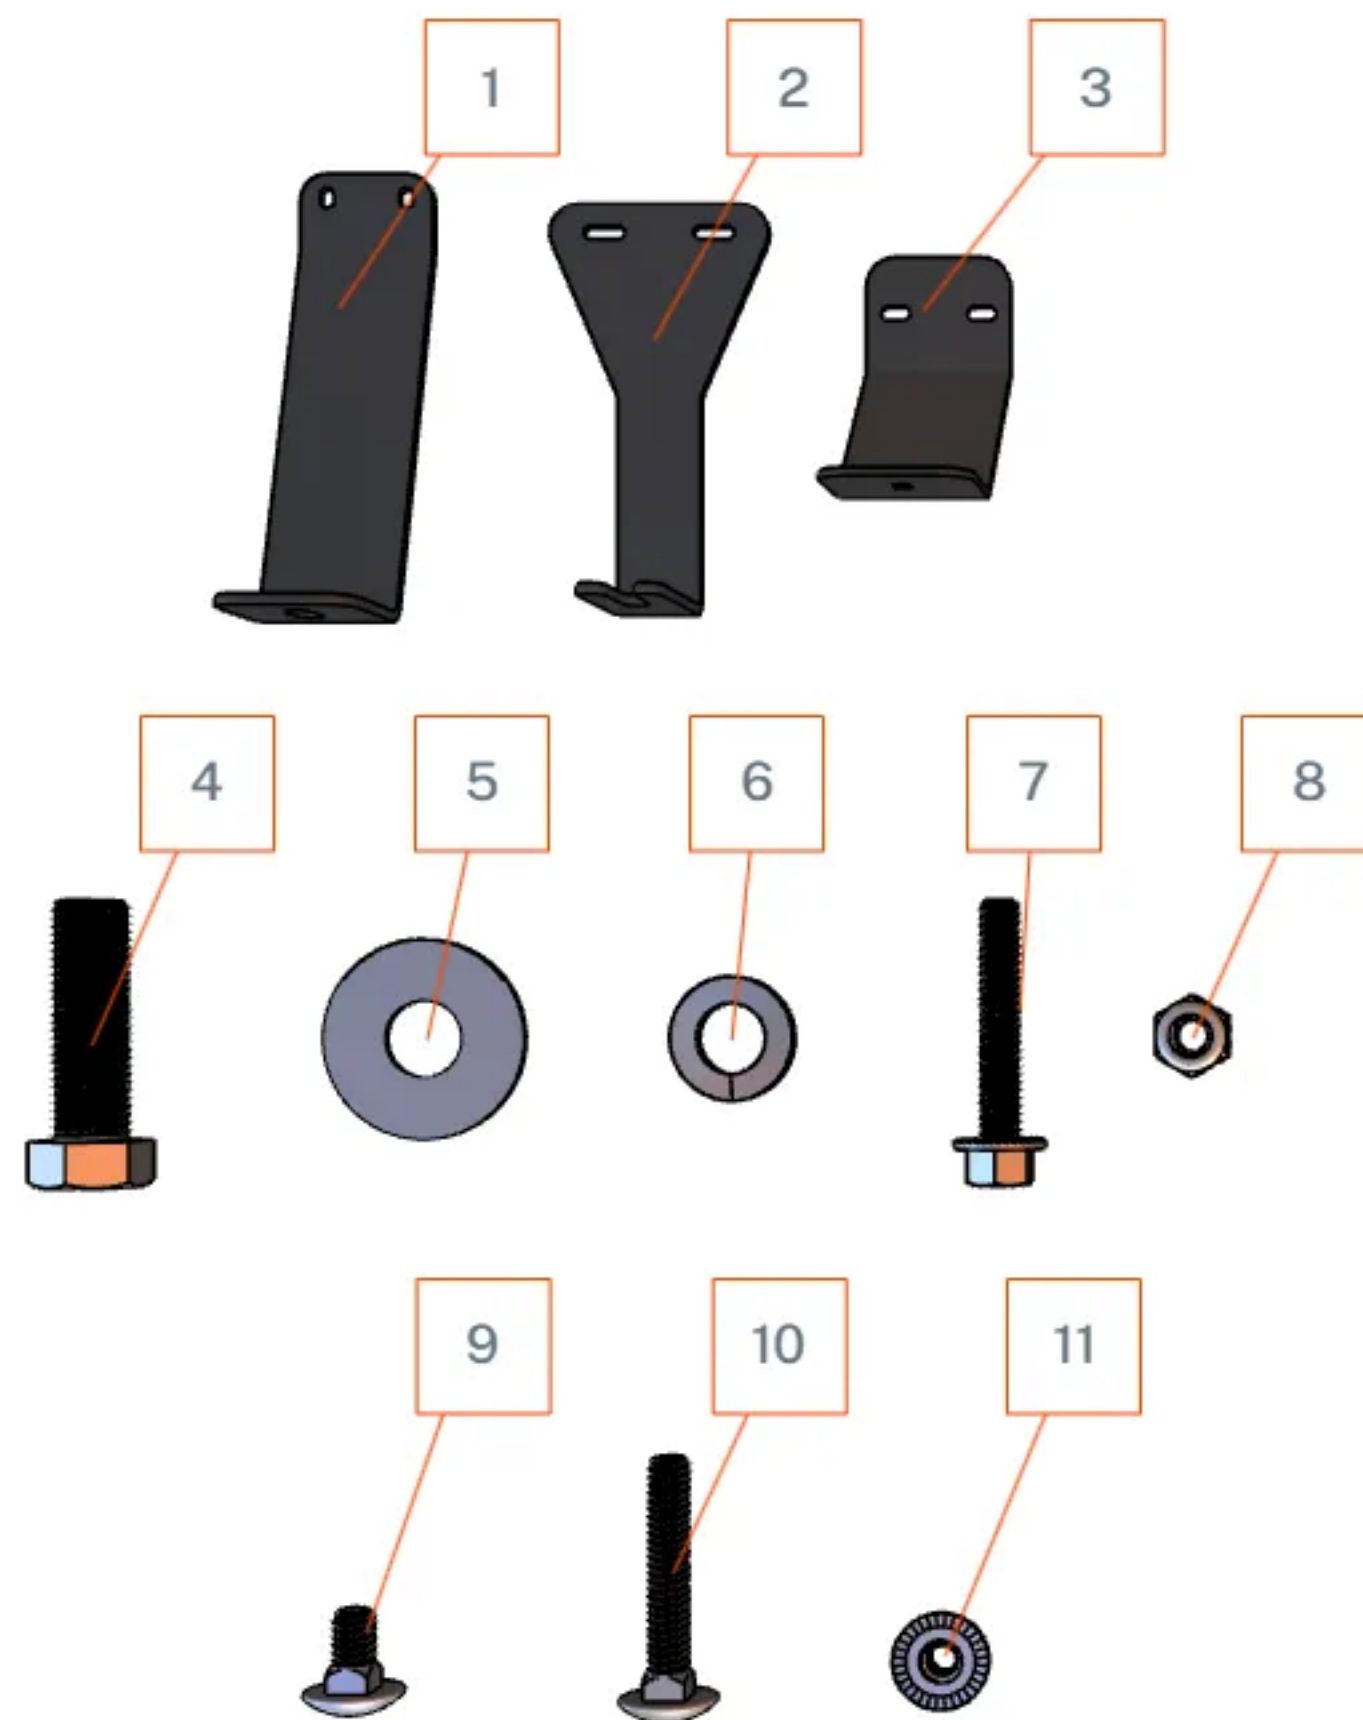


Item Number	Name	Quantity
1	Rear Mounting Bracket	2
2	Side Mounting Bracket	2
3	Electronics Tray Mount	4
4	7/16-20 Bolt	2
5	7/16 Washer	2
6	7/16 Lock Washer	2
7	1/4-20 1.5" Long Serrated Flange Bolt	4
8	1/4-20 Lock Nut	4
9	1/4-20 1/2" Long Carriage Bolt	8
10	1/4-20 1.5" Long Carriage Bolt	4
11	1/4-20 Serrated Flange Nut	16




Remove the drawer and the top lid
from the frame of the box for
installation

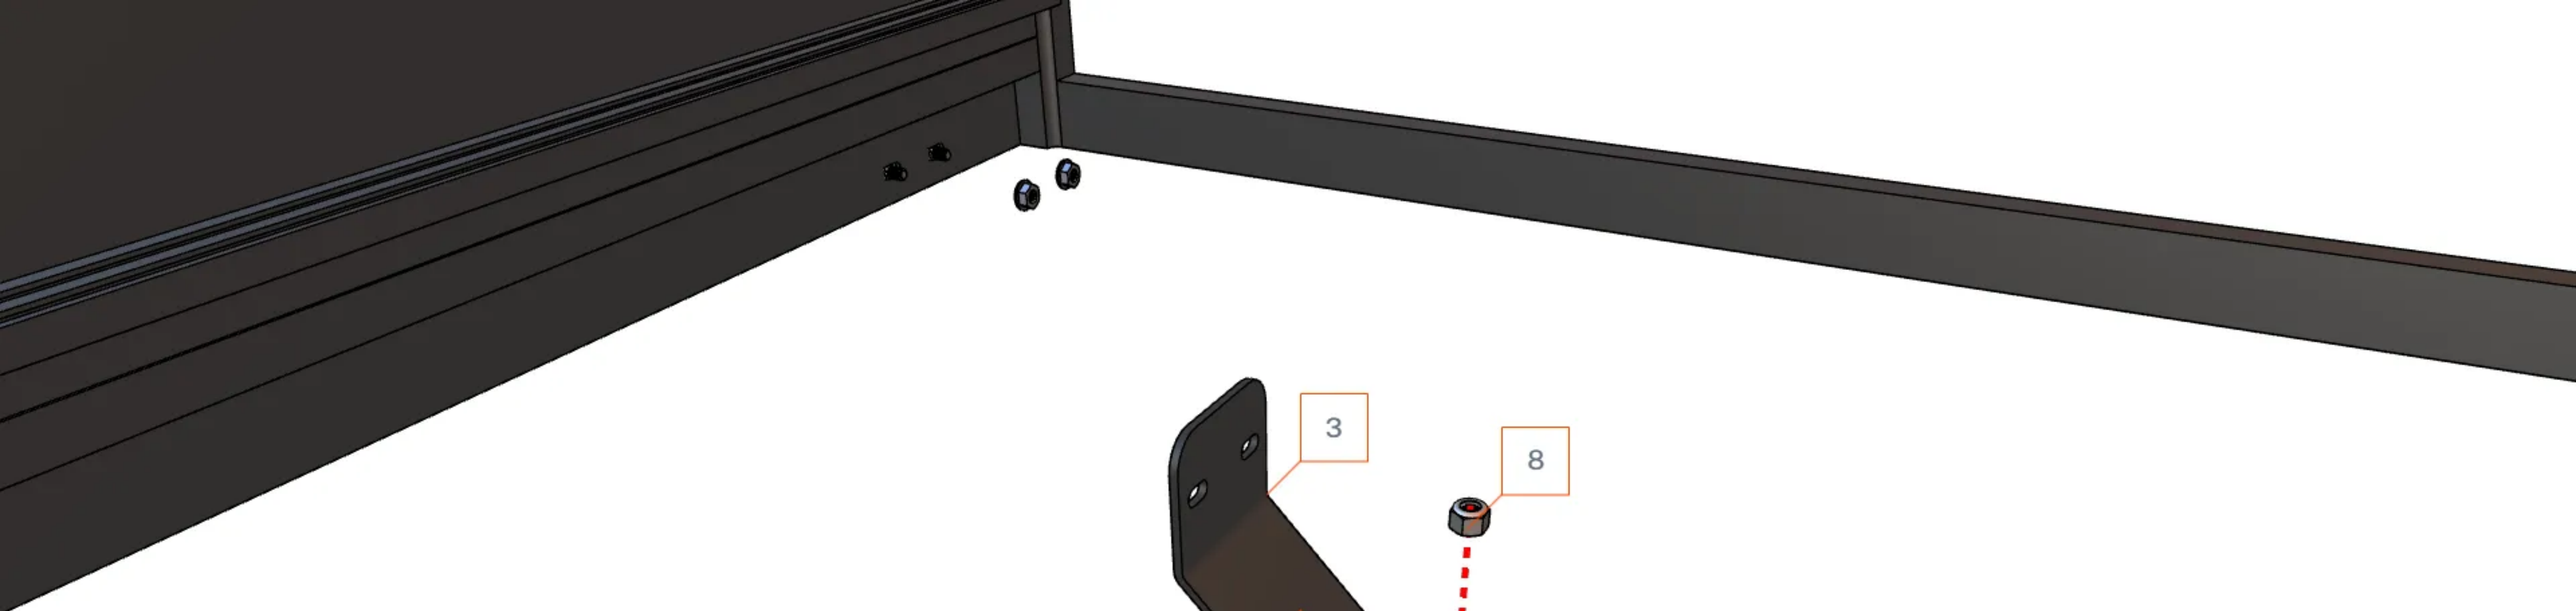


The 4 electronics tray brackets can be fitted with the carriage bolts and nuts to create mounting studs for the tray.

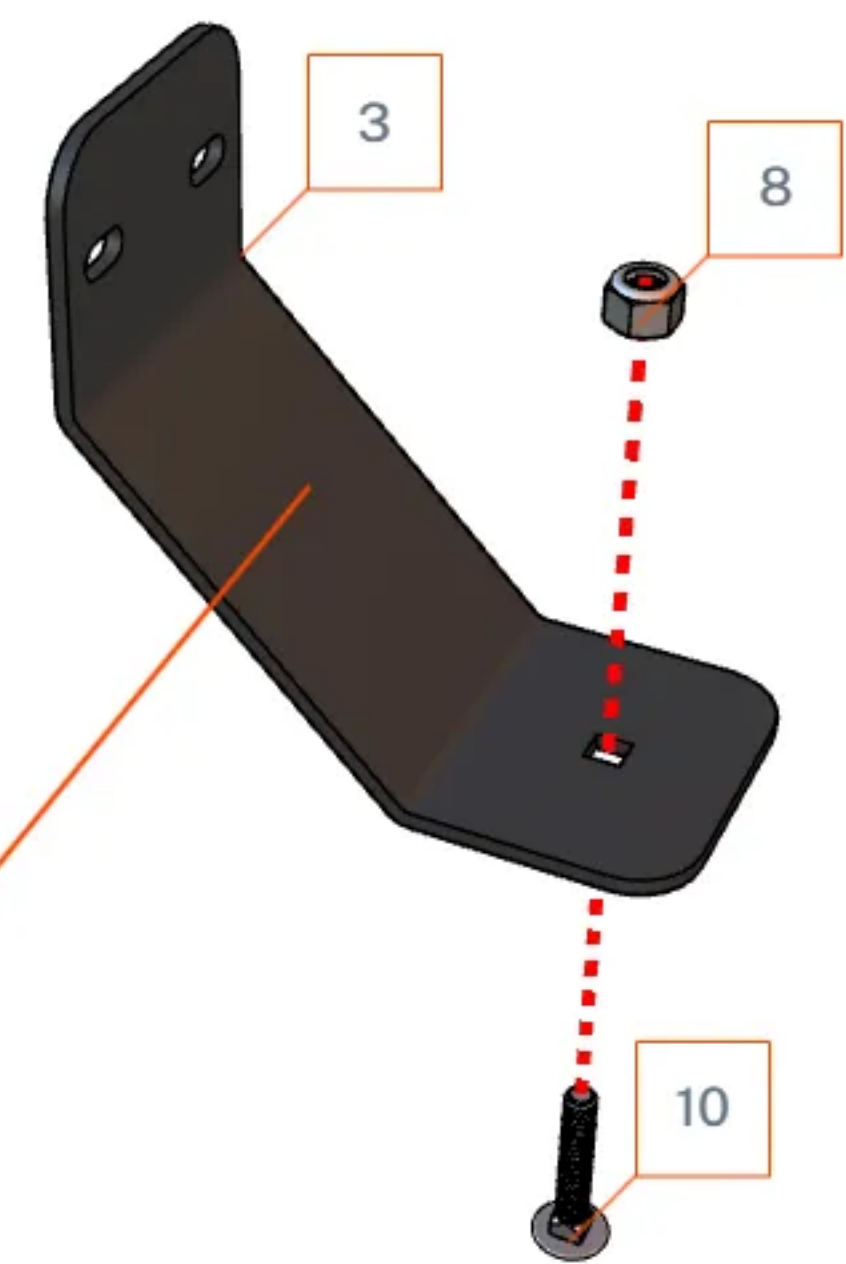


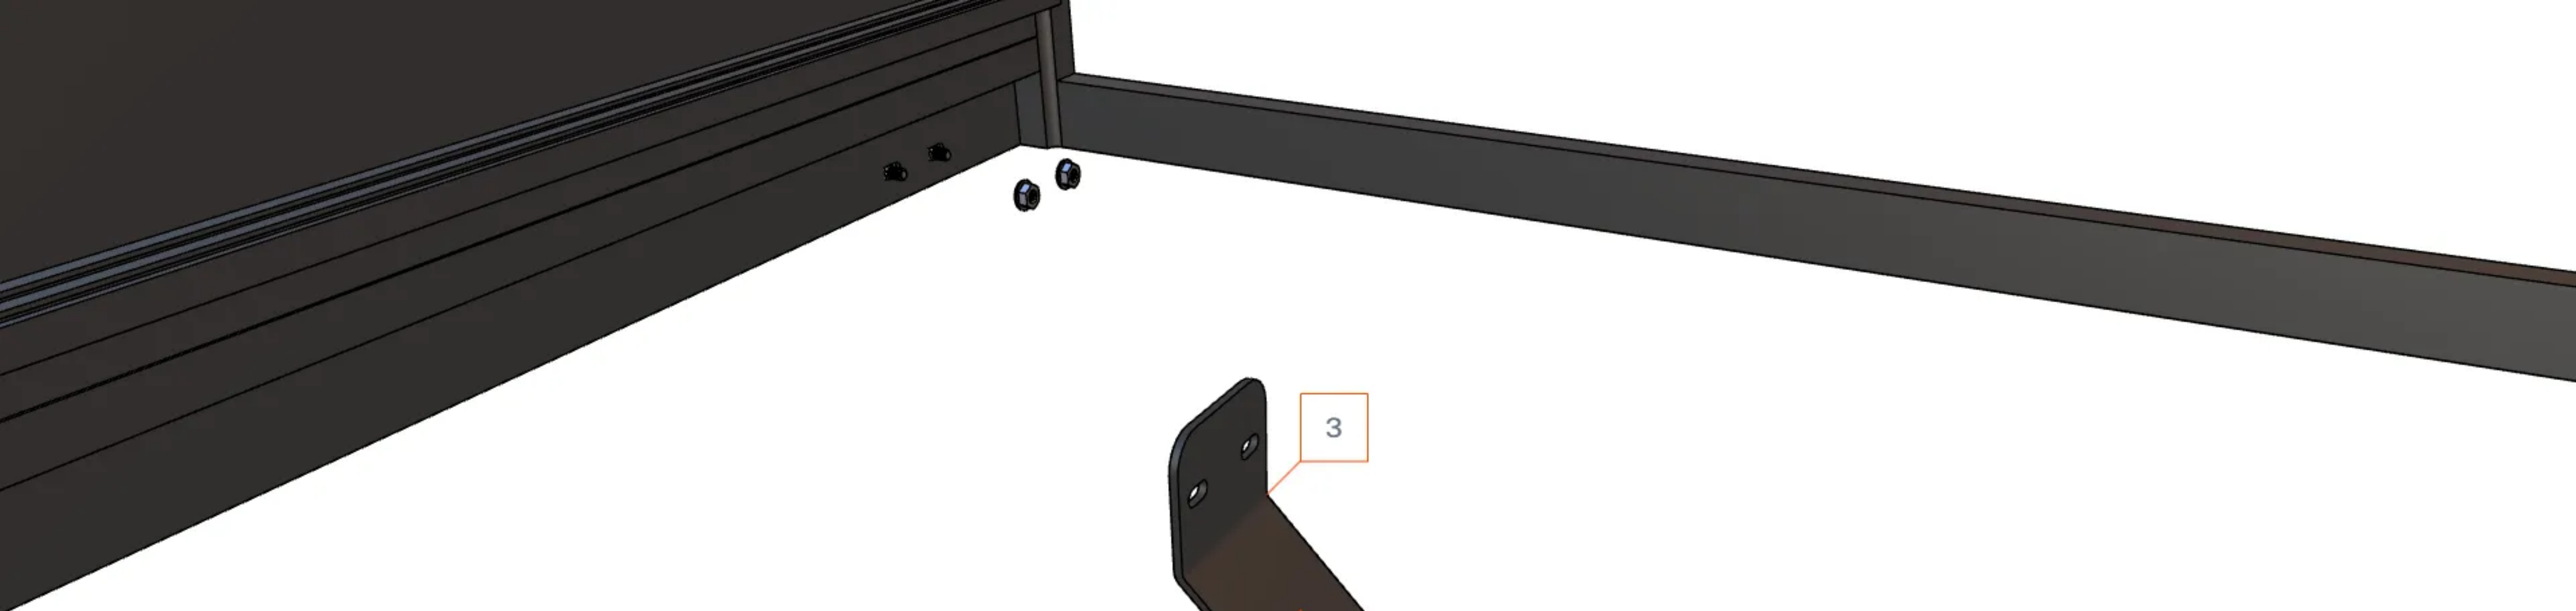

The 4 electronics tray brackets can be fitted with the carriage bolts and nuts to create mounting studs for the tray.



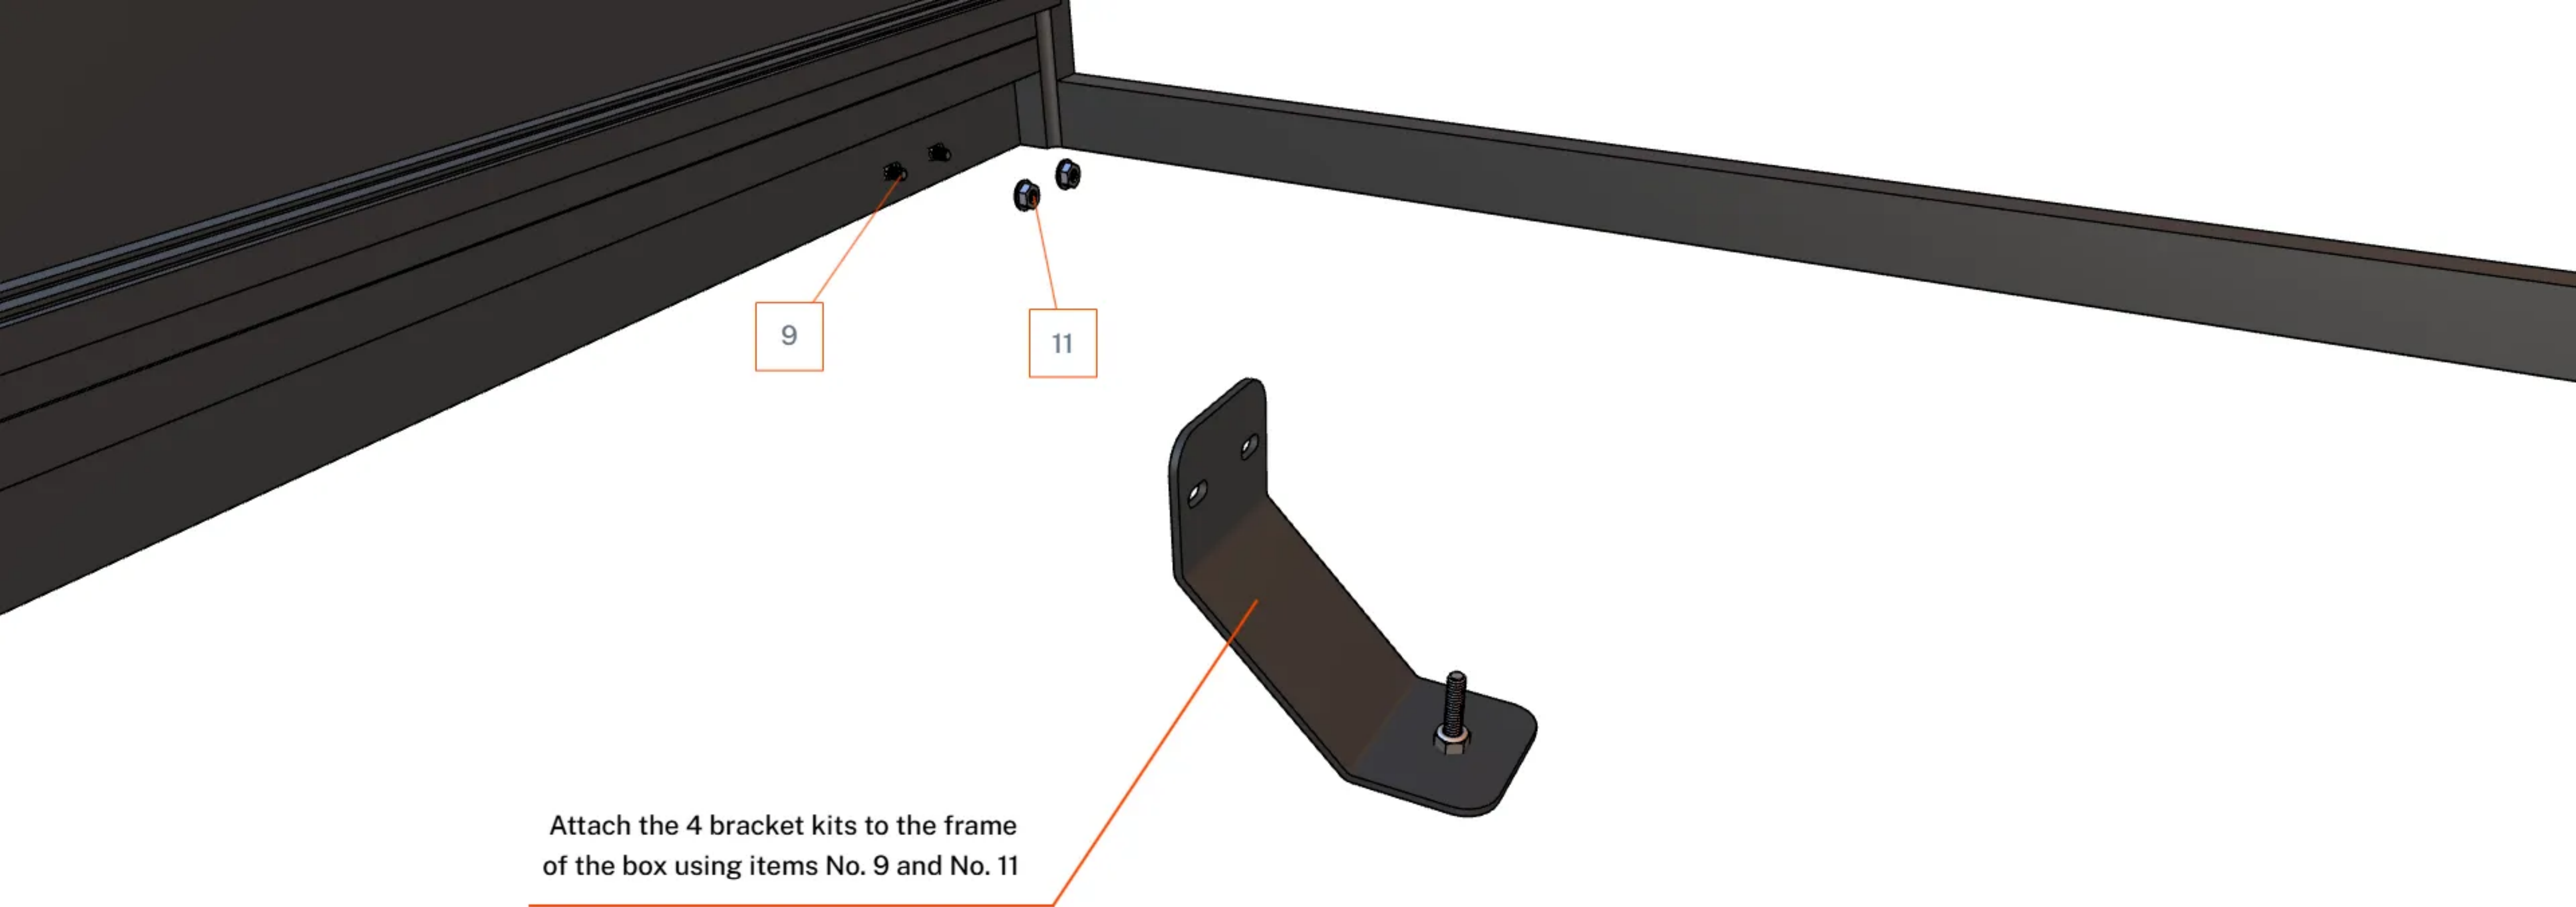

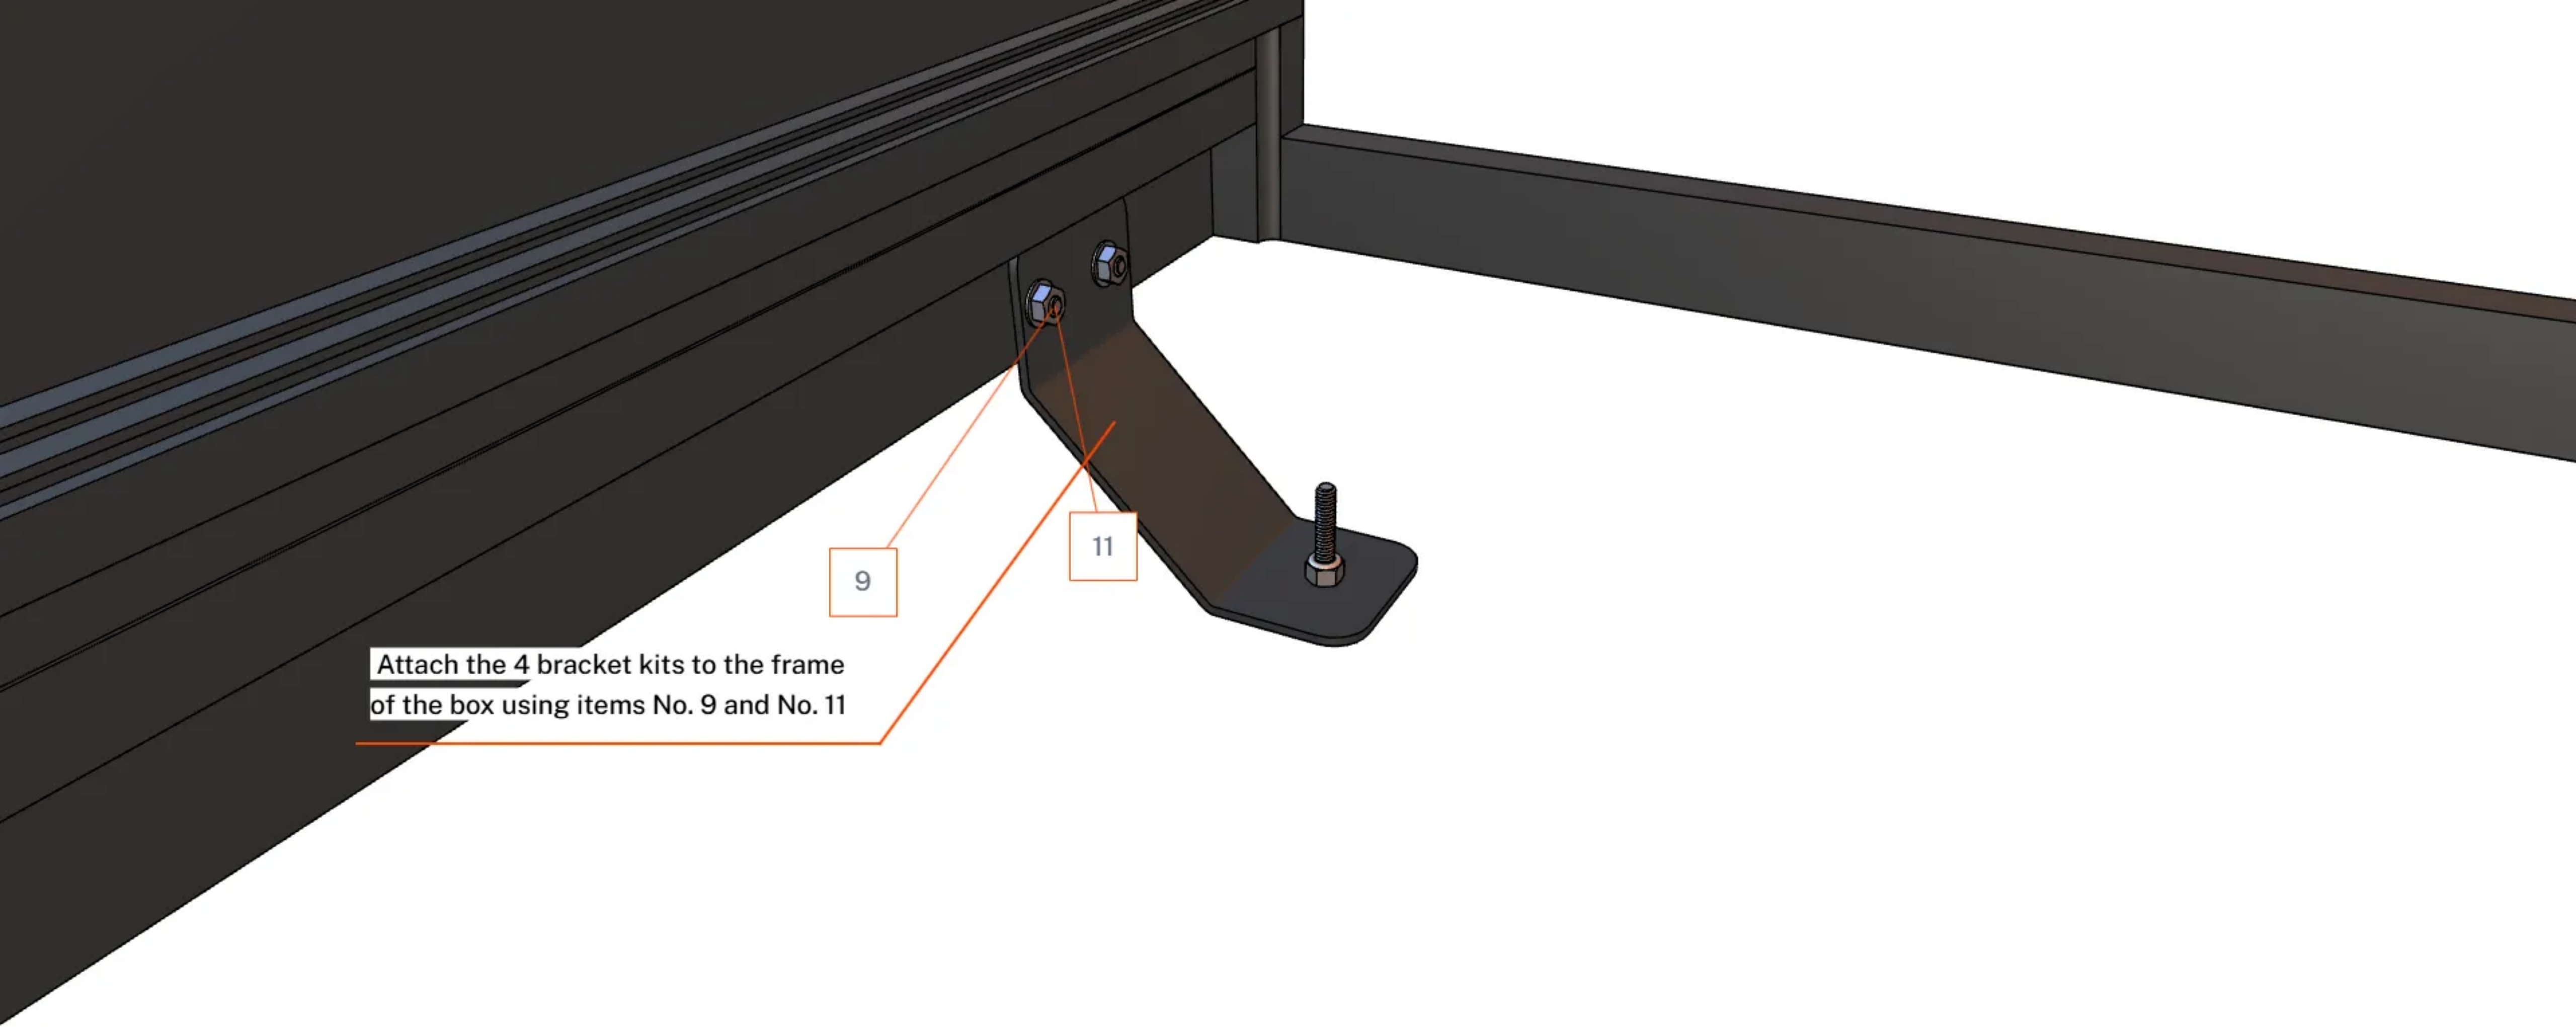



9

11

Attach the 4 bracket kits to the frame
of the box using items No. 9 and No. 11



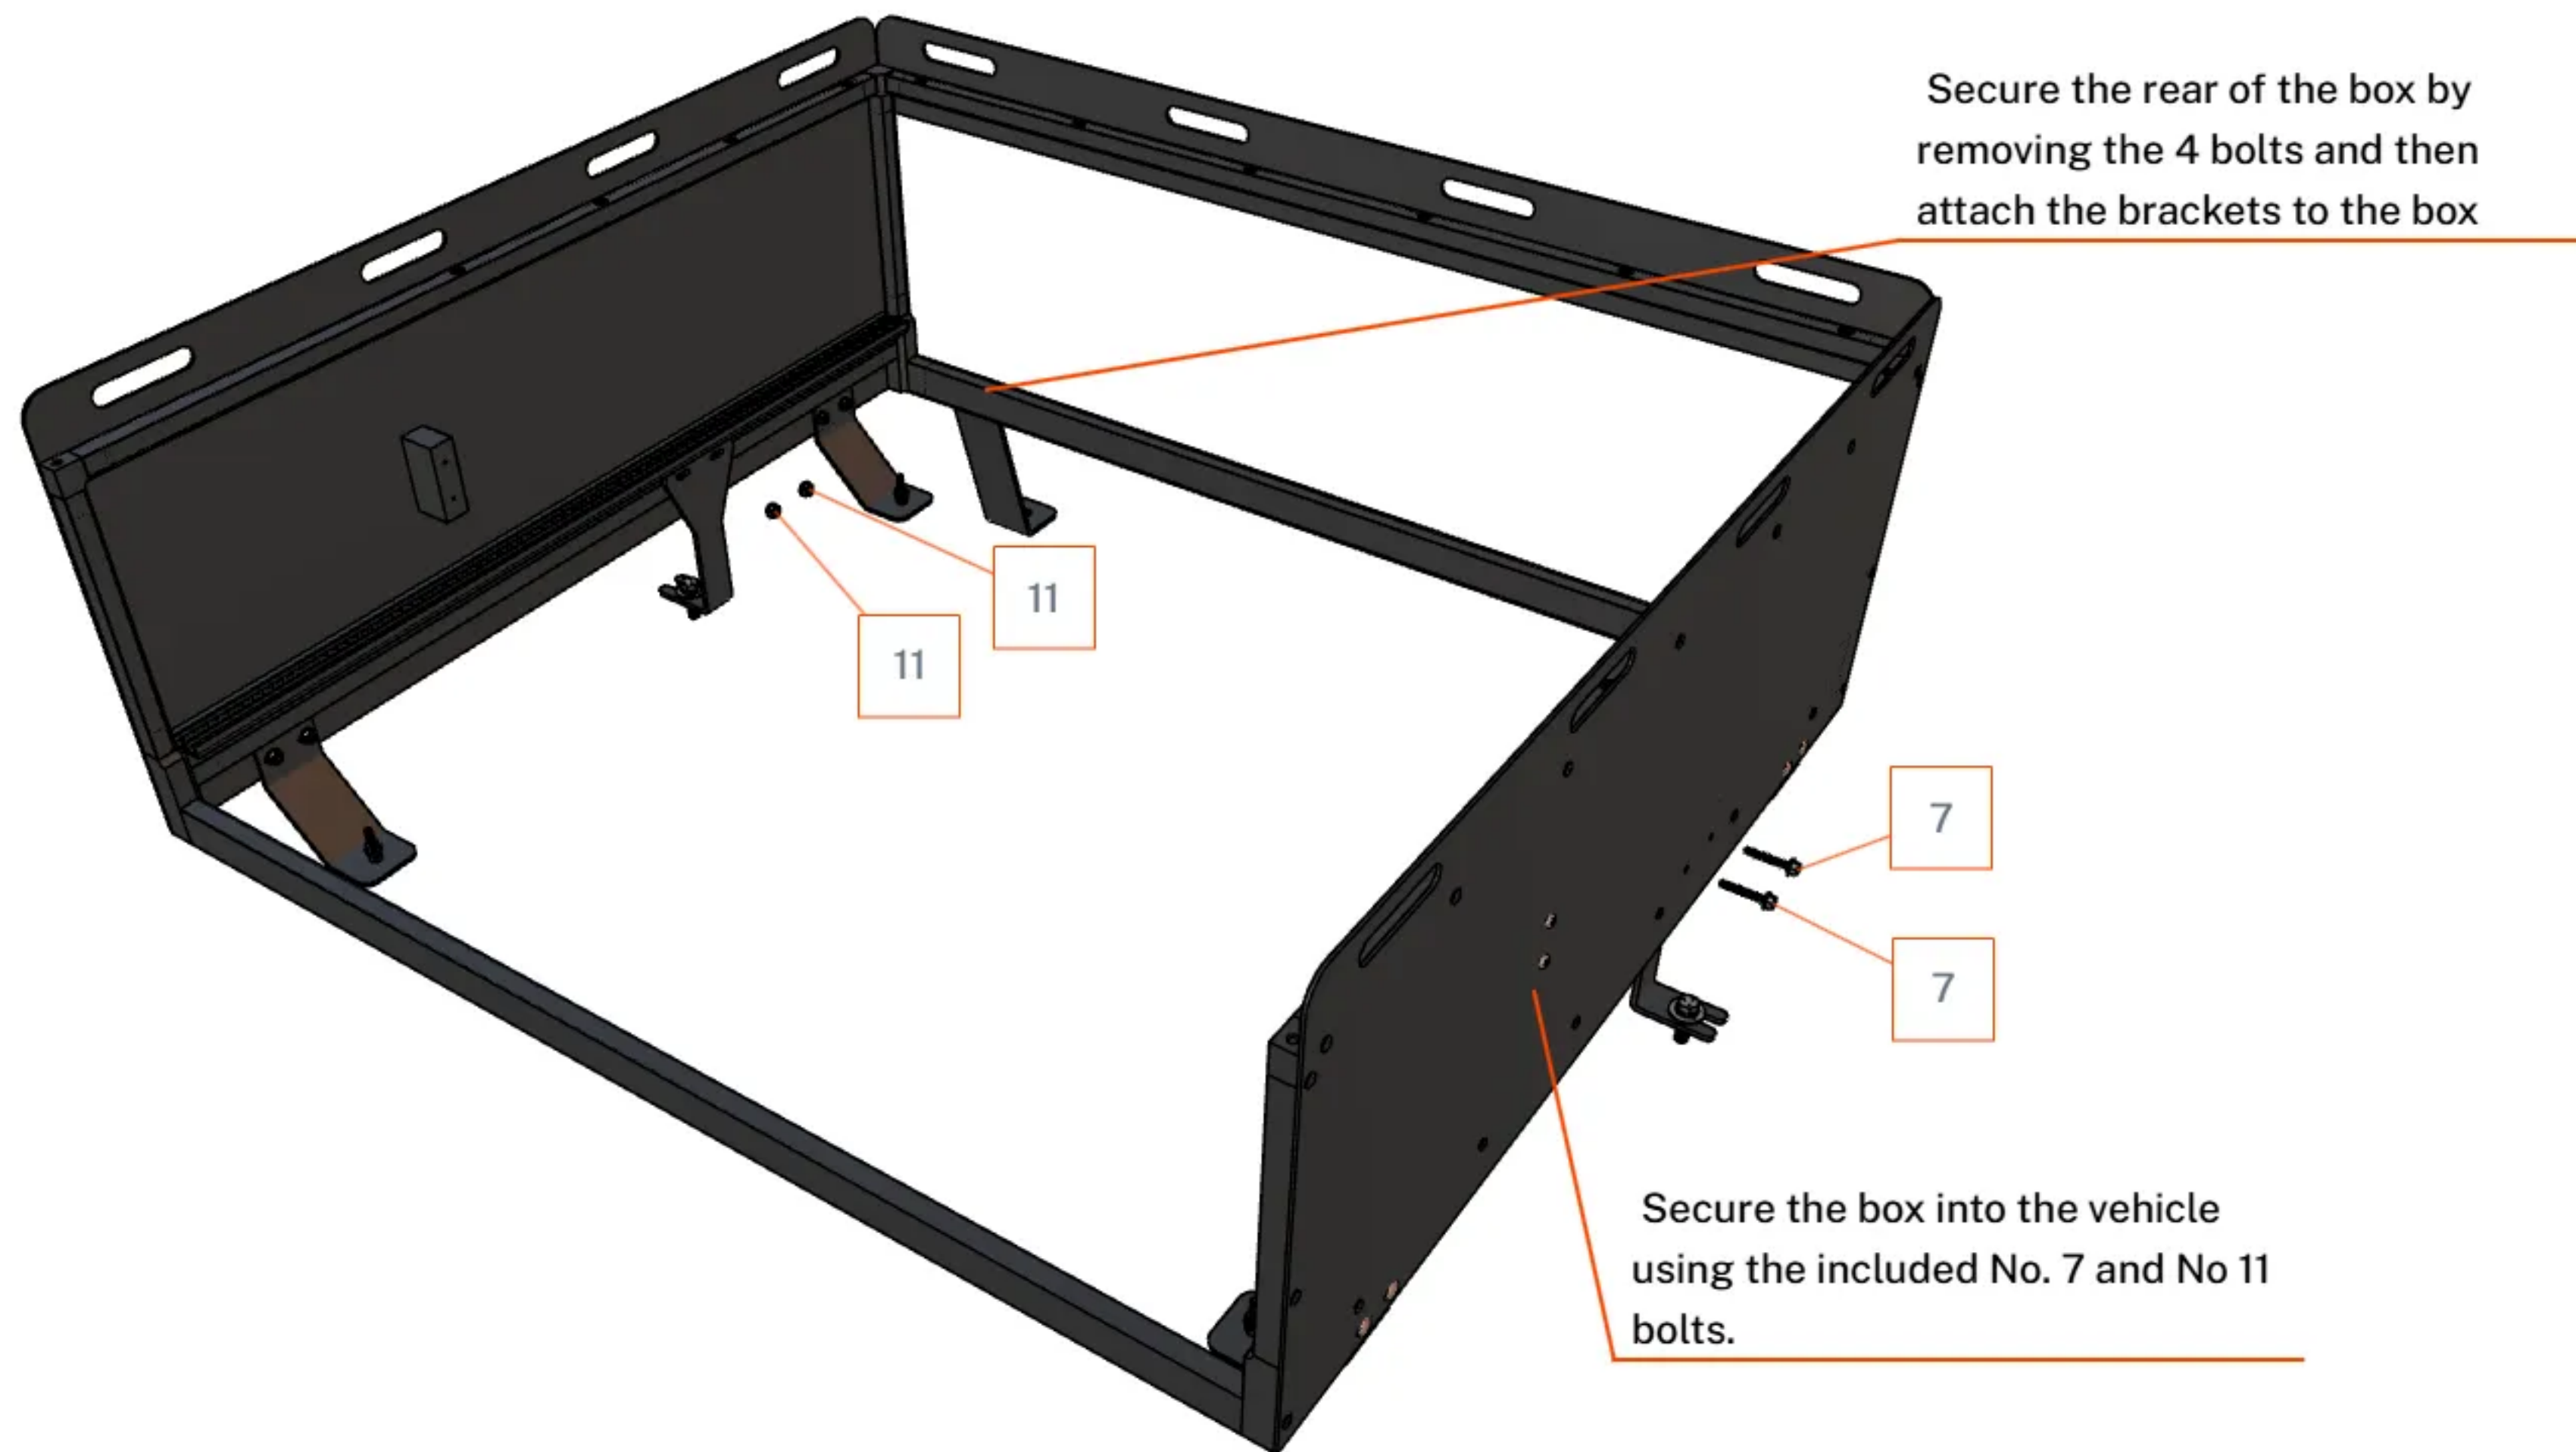


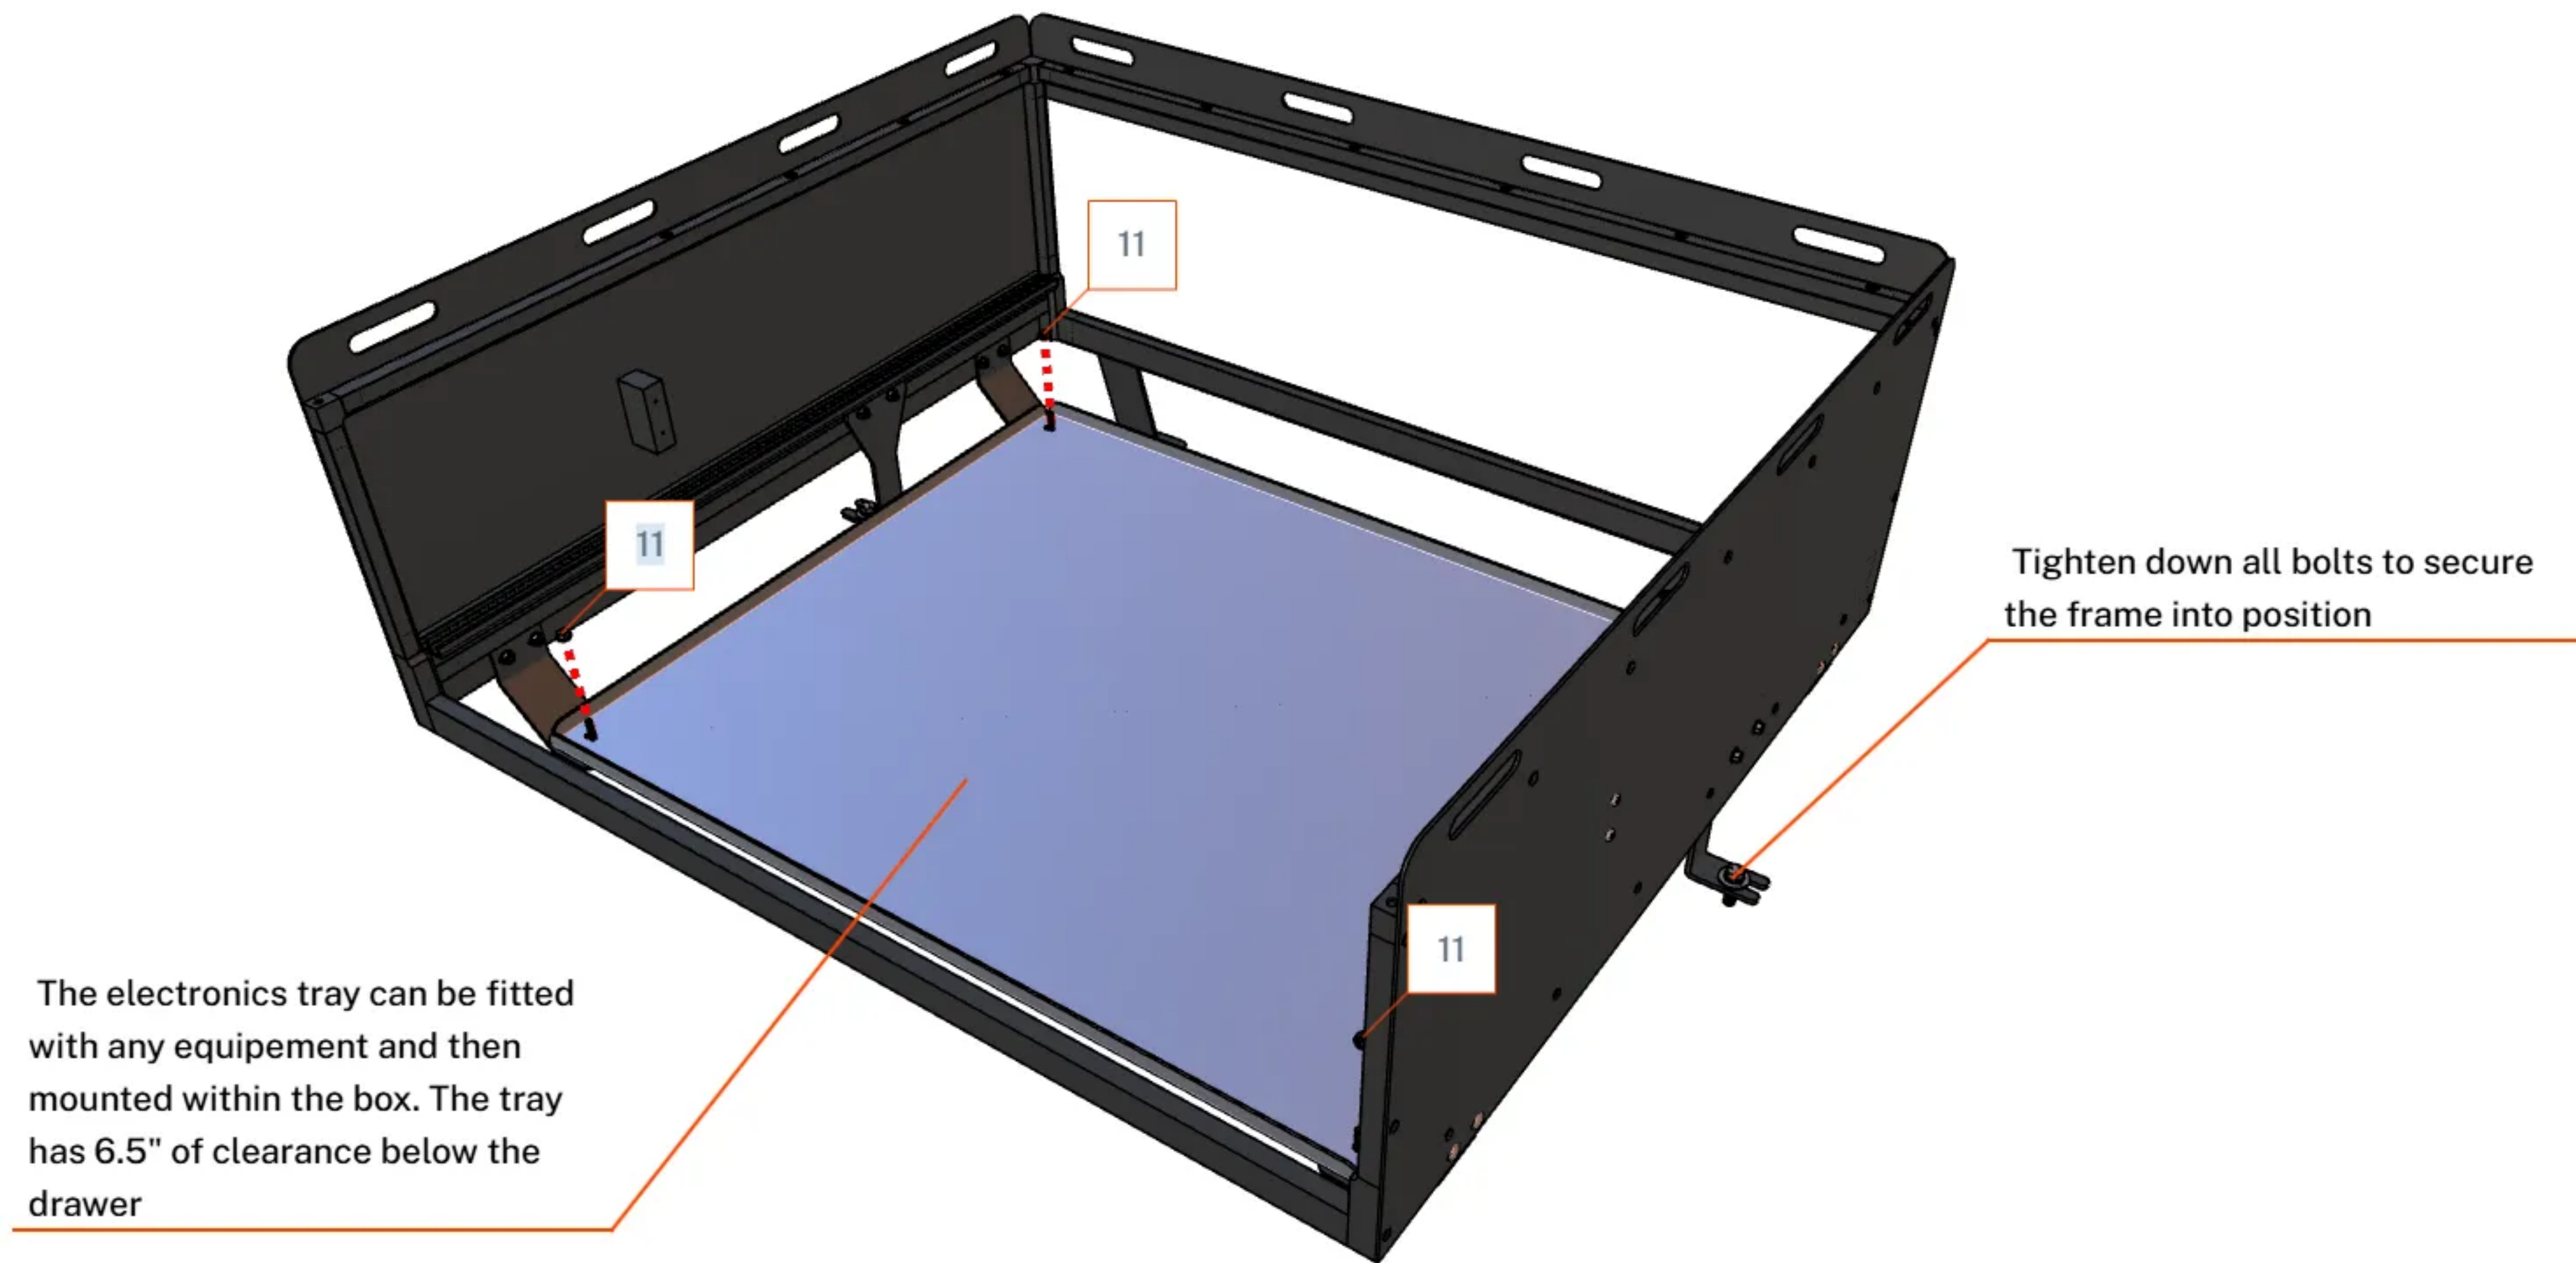


The electronics tray can be fitted with any equipment and then mounted within the box. The tray has 6.5" of clearance below the drawer

Tighten down all bolts to secure the frame into position

The electronics tray can be fitted with any equipment and then mounted within the box. The tray has 6.5" of clearance below the drawer

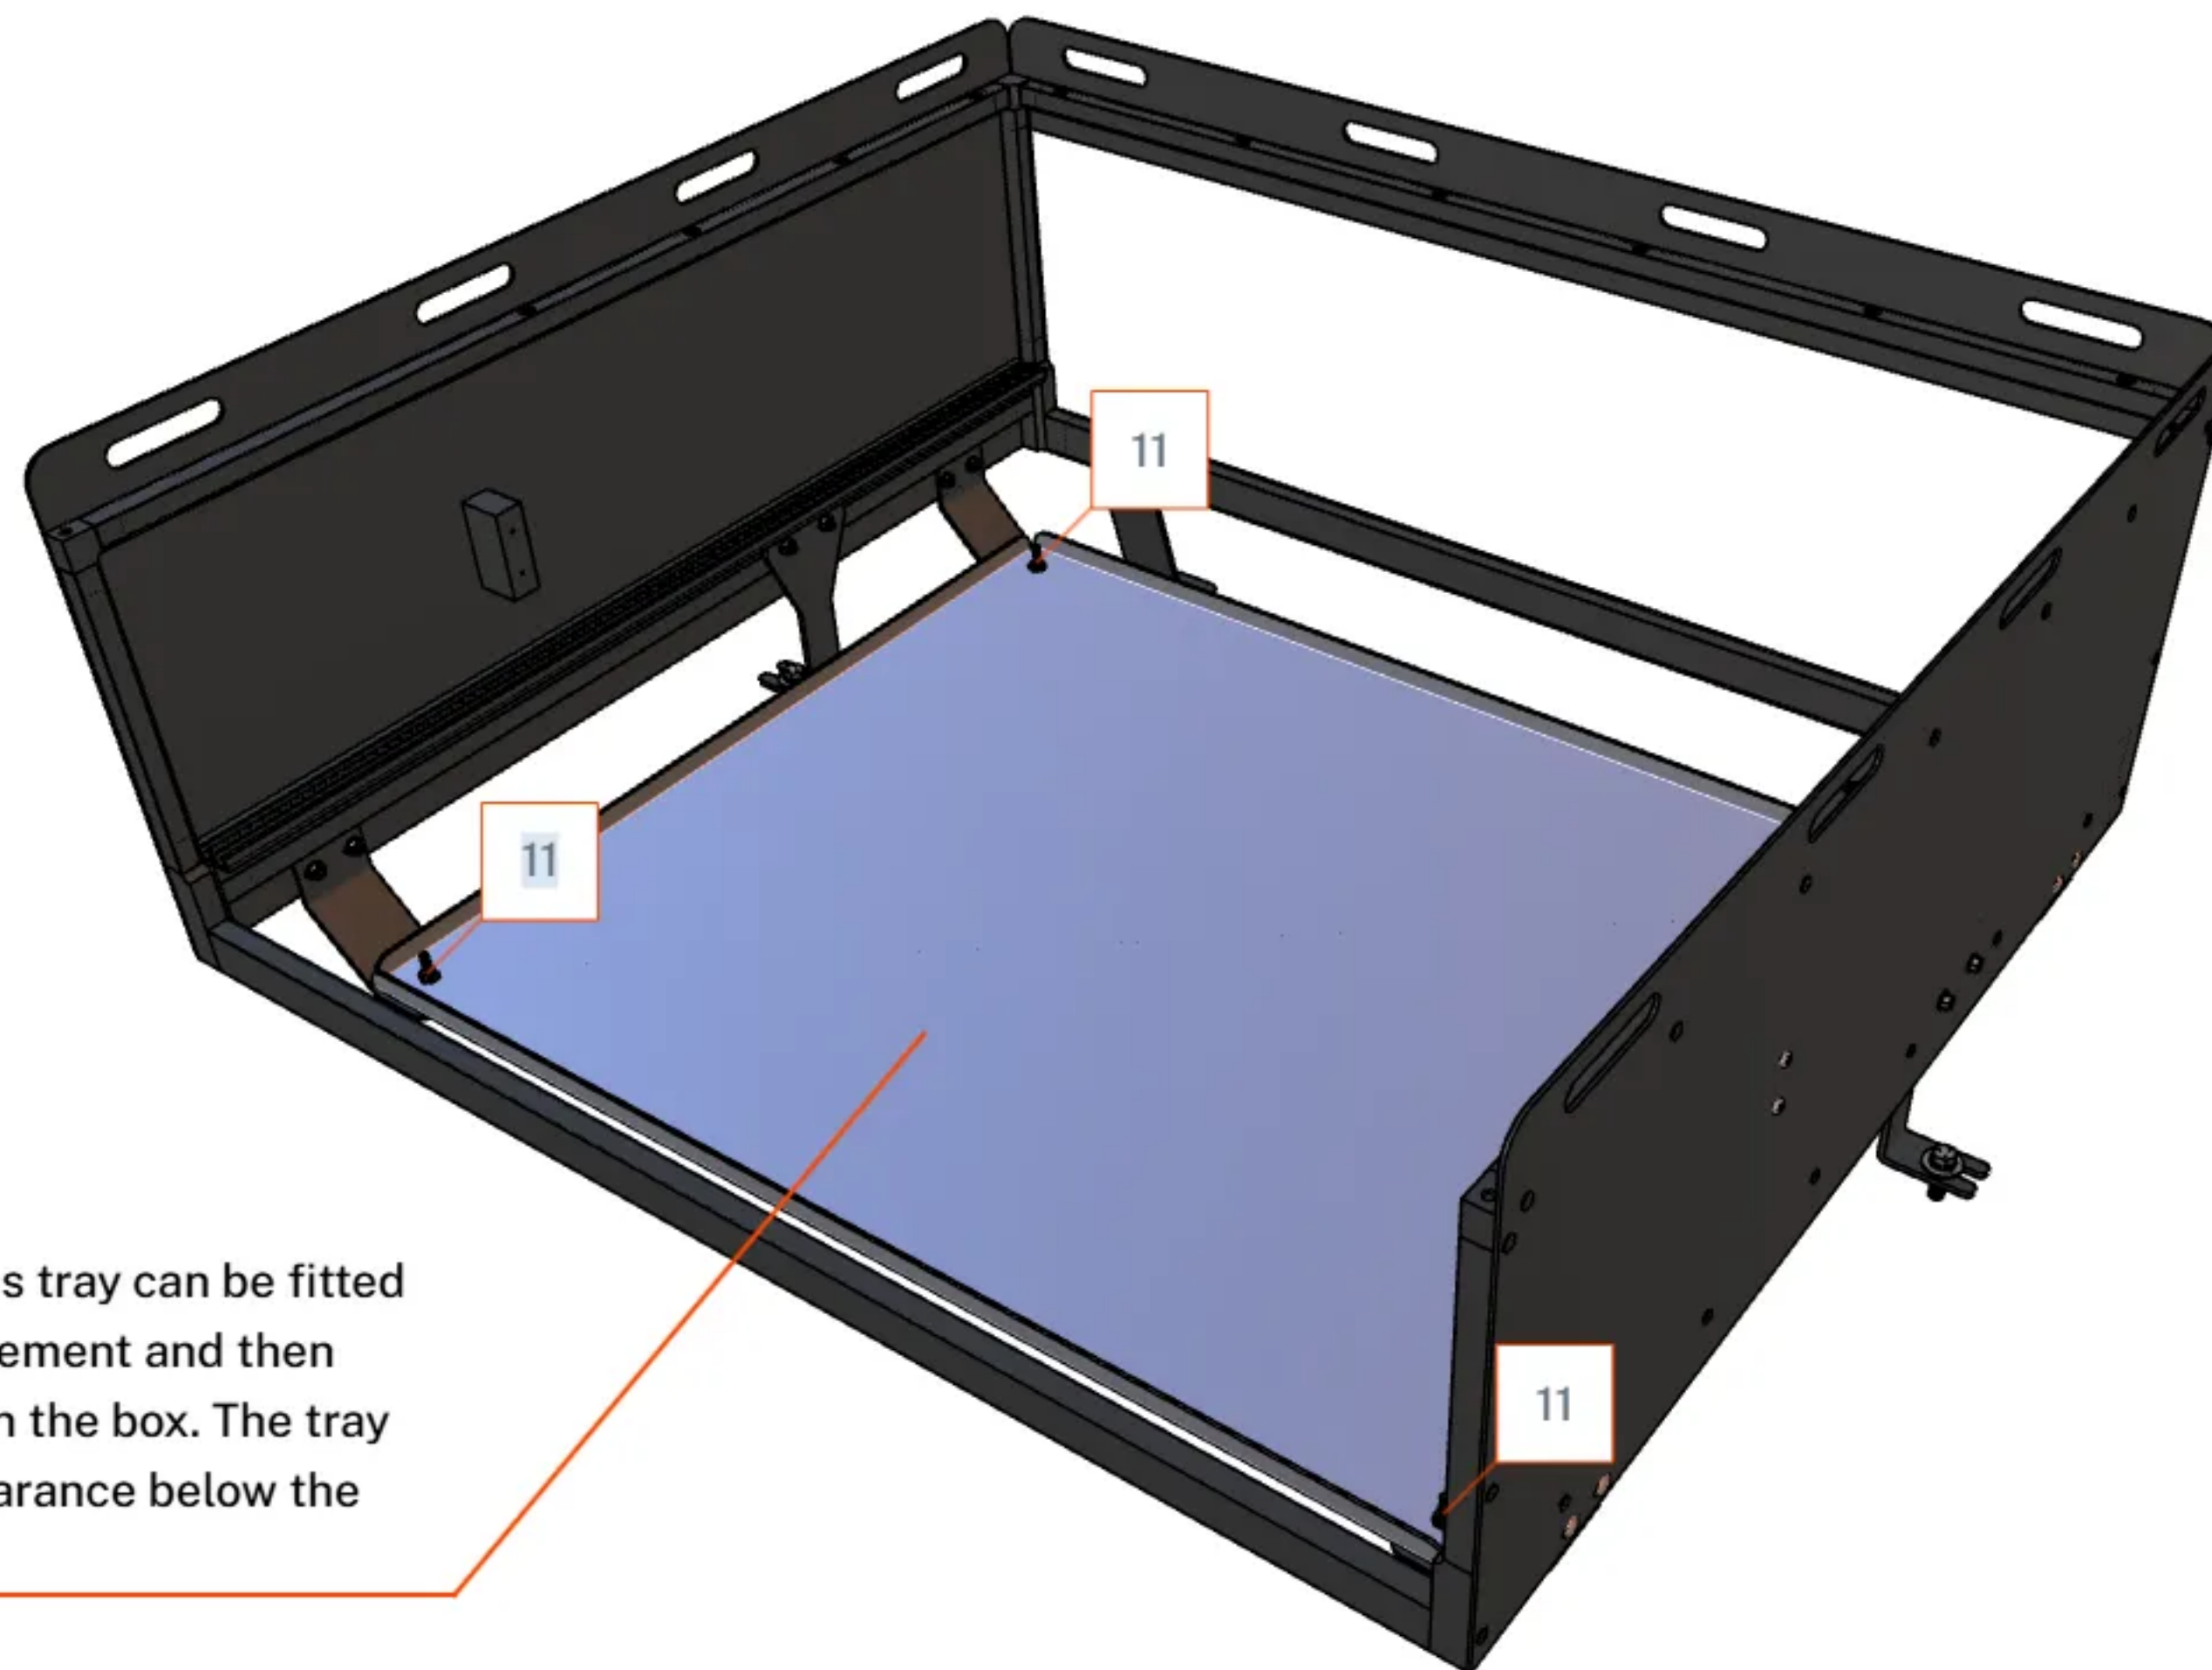

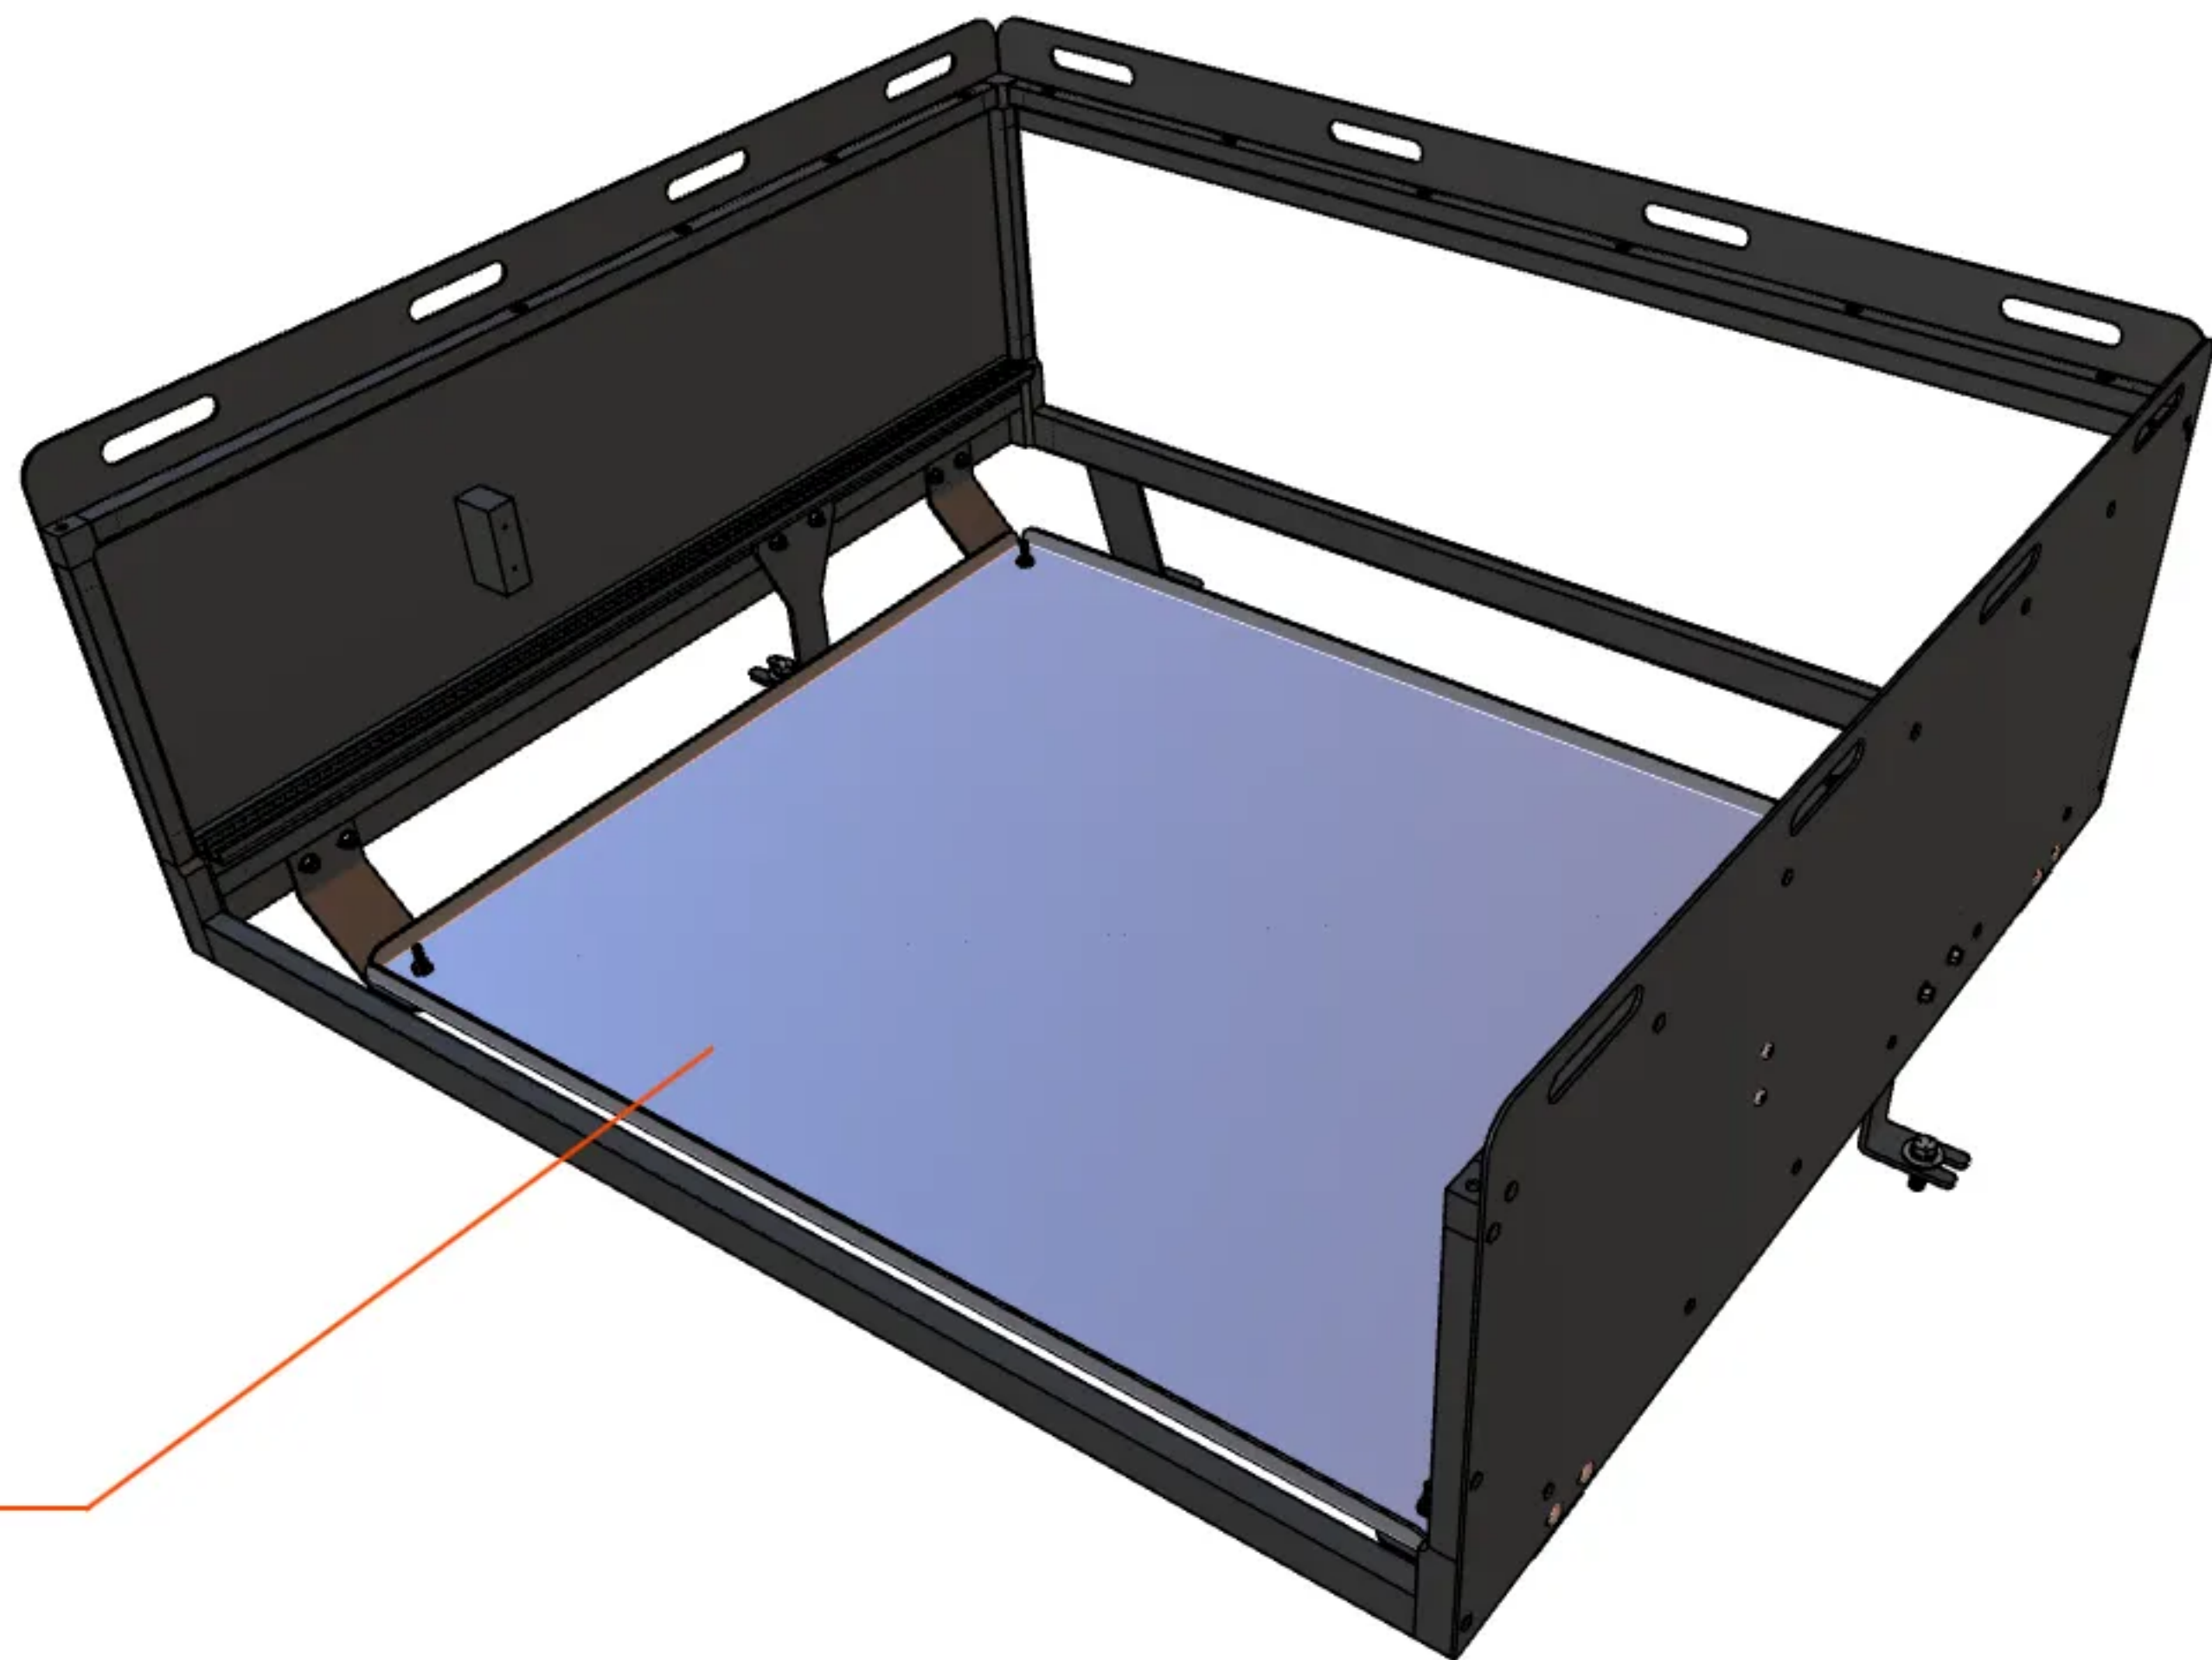

The drawer and top can be
reassembled onto the box

