

PALACE FLYSCREENS

OFFICIAL WINDOW MEASUREMENT GUIDE

Precision Fit Guarantee

To ensure a flawless fit for your custom retractable flyscreen, please measure your window opening carefully following the 3 simple steps below. Always use a **metal tape measure** for maximum accuracy.

STEP 1

Locate Rubber Gaskets

Open your window fully. Locate the flexible rubber seals (gaskets) running along the inside edge of the window frame. Your measurements will be taken strictly inside these seal edges.

STEP 2

Measure Width (W)


Measure horizontally from the inner edge of the left seal to the inner edge of the right seal. Take 3 measurements (Top, Middle, Bottom) and **record the smallest dimension** in cm or mm.

STEP 3

Measure Height (H)

Measure vertically from the inner edge of the top seal to the inner edge of the bottom seal. Take 3 measurements (Left, Middle, Right) and **record the smallest dimension**.

Measurement Diagram

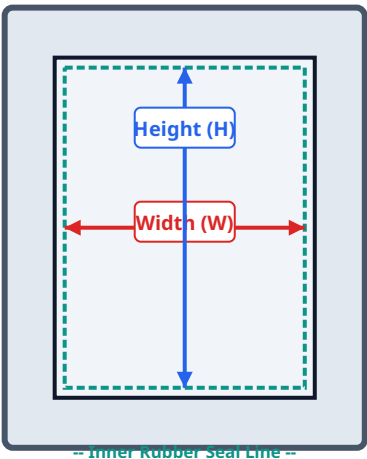

⚠ Important Notice: Outer Clearance & Profile Margin

Do not add extra margins! Enter the exact seal-to-seal measurement into our calculator. Palace FlyScreens automatically calculates and includes the required +4 cm (+40 mm) aluminum outer frame border during production. Ensure you have at least 4 cm of flat surface around your window exterior for mounting.