


coastflow

tap water filter — user guide

coastflow is a tap-mounted water filter for Australian kitchens. It screws onto your existing tap, filters the water through a single membrane cartridge, and a small display tells you when the cartridge is due for a change. This guide covers fitting it, using it, and swapping the cartridge.

1 what's in the box

- 1 × coastflow filter (chrome), membrane cartridge already fitted
- 6 tap adapters + an M24 adapter
- sealing washers / o-rings
- an adapter key (tightening tool)
- this guide

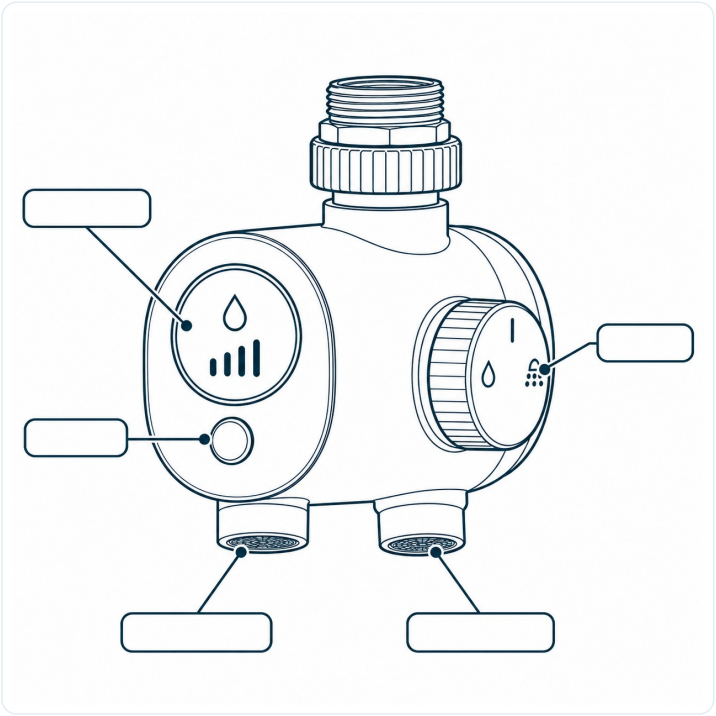


display · reset button · filtered/unfiltered selector · outlets

2 before you start — will it fit?

- **Fits:** round threaded spouts with a **removable aerator**, thread **19.5-23.5 mm**
- **Doesn't fit:** square spouts, pull-out/hose taps, taps with no removable aerator
- Needs normal mains pressure **0.1-0.4 MPa** — the display is water-powered, so low pressure won't power it


Not sure it fits? Contact coastflow before you order and we'll help you check.

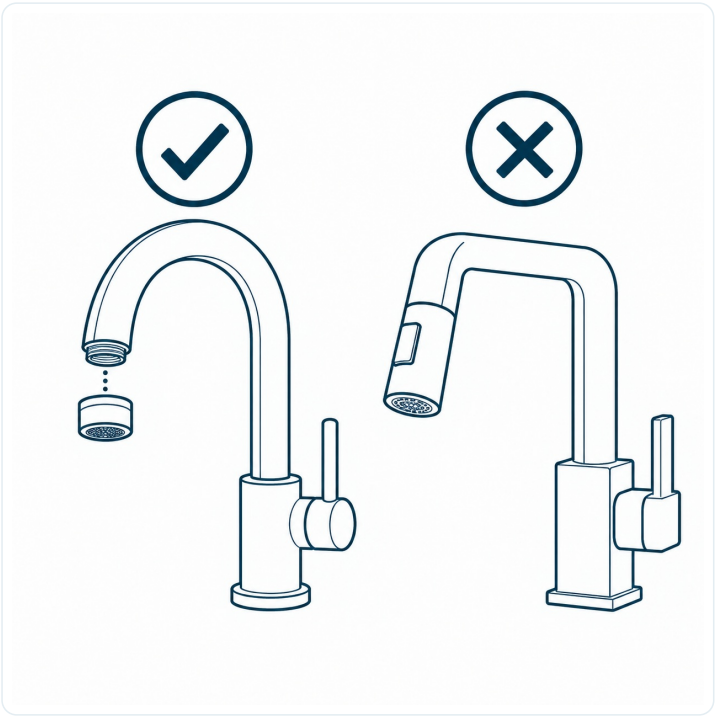

✓ round tap with removable aerator · X square / pull-out tap

3 fit it — no plumber

- 1. Unscrew your tap's aerator (turn anticlockwise; keep it safe).
- 2. Pick the adapter that matches your thread and fit it with a washer so it sits flush.
- 3. Screw coastflow onto the adapter and hand-tighten — firm, not forced. Don't cross-thread.
- 4. Seat the filter barrel, run the tap and check for leaks.

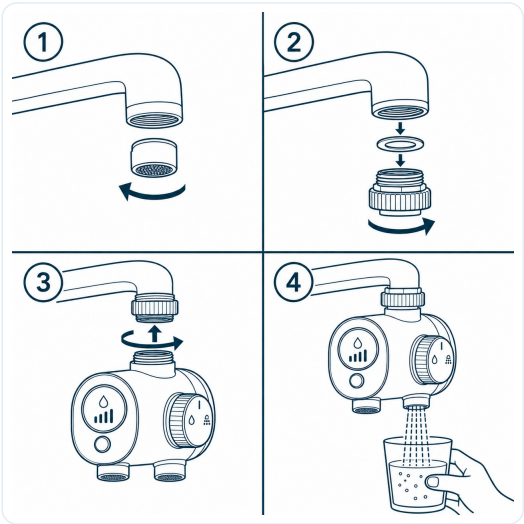

install in four steps

4 first use — flush


Before drinking, **run filtered water for 60 seconds** to flush the new cartridge (same after 2+ days unused). A little fine black carbon dust at first is normal and clears with the flush.

5 everyday use

- Filtered** — twist the selector to filtered for drinking & cooking; the display comes on.
- Unfiltered (bypass)** — for washing up and rinsing, so you don't use up the cartridge.
- The display shows water **temperature** and a **filter-life bar** — powered by the water flow, no batteries.




the display

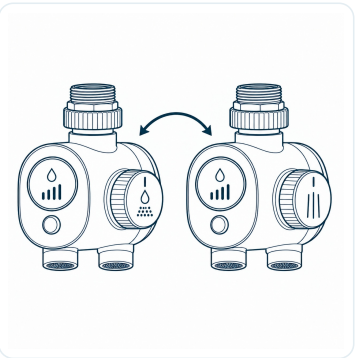

filtered ↔ bypass

6 replacing the cartridge

- Lasts about **1,000 L (≈ 3-6 months)**. Replace when the life bar shows **red**, or sooner if taste/flow change.
- Turn off the tap, open the housing, remove the old cartridge.
- Fit a new coastflow membrane cartridge (washer seated correctly) and close it.
- Turn on, **flush 60 seconds**, then **hold the reset button 5 seconds while filtered water runs** to reset the counter.

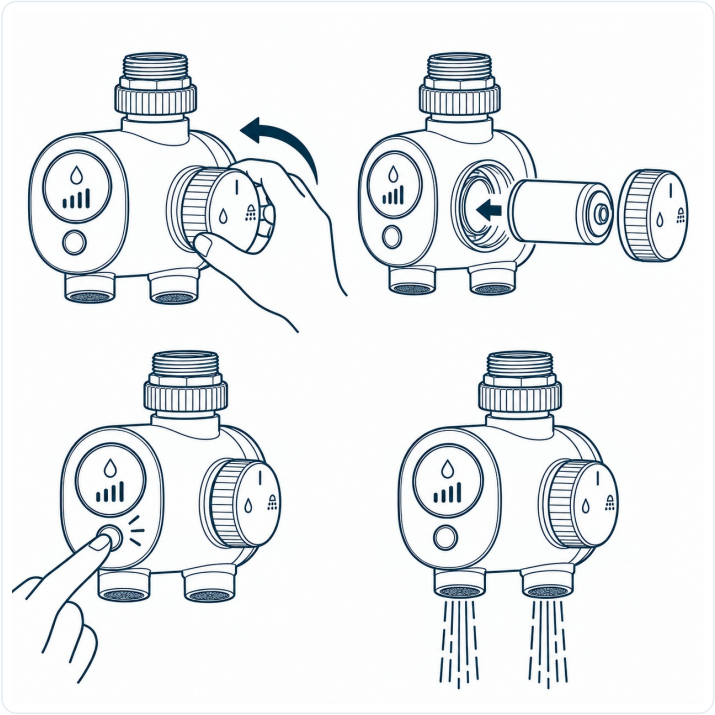

open · swap cartridge · hold reset 5s · flush

7 care & troubleshooting

- Wipe with a soft damp cloth — never steel wool, abrasives or solvents.
- The cartridge can't be cleaned or reused. Don't freeze (not below 5 °C). Don't run water hotter than 50 °C.
- Drips at the join?** Re-seat the washer or try the next adapter size.
- Display not showing?** It's water-powered — needs the tap running at normal pressure.
- Water tastes off?** Flush 60 s; if it persists, replace the cartridge.

8 your rights & support

coastflow comes with guarantees that **cannot be excluded under the Australian Consumer Law** — you're entitled to a replacement or refund for a major failure, and to a repair or replacement if the product isn't of acceptable quality. This is in addition to coastflow's own 12-month limited hardware warranty.

Use with cold municipal tap water that's already safe to drink. coastflow improves taste and clarity and reduces the taste and smell of chlorine. It is not a treatment for unsafe water and doesn't replace boiling where that's required.

Support: contact coastflow for support · australian-owned.

key specs

Filtered water flow	~1.0 L/min
Cartridge life	~1,000 L (≈ 3–6 months)
Water temperature	5–50 °C
Working pressure	0.1–0.4 MPa (100–400 kPa)
Fits spout thread	19.5–23.5 mm (round, removable aerator)
Display	temperature + filter-life bar, water-powered (no batteries)
Unit size	112 × 141 × 65 mm
In the box	filter + membrane cartridge + 6 adapters + M24 adapter + washers + key