

Thinking globally and acting locally: How HP's 3D printing technology helps iOrthotics develop products that benefit people everywhere



Leveraging HP's Multi Jet Fusion 3D Printing technology, iOrthotics manufactures new orthotic devices that offer higher quality more quickly, improving patient outcomes while also reducing waste.

INDUSTRY SECTOR

Custom Orthotics

OBJECTIVE

Utilise the best materials, software, hardware and design processes to create digital, additively manufactured orthotics

APPROACH

Determine if HP's Multi Jet Fusion 3D printing technology could enable the development of custom orthotics that are stronger, lighter, and of higher quality than other those made using other manufacturing processes. Then incorporate HP's technology into a digital workflow that is faster, more sustainable and less expensive, allowing iOrthotics to produce custom orthotics, on demand

TECHNOLOGY

HP Multi Jet Fusion technology,
HP Jet Fusion 3D Printing Solution



Data courtesy of iOrthotics

Summary

"iOrthotics produces custom foot orthotics for podiatrists in Australia and around the world," says iOrthotics Founder and General Manager, Dean Hartley. "Our business model is based on innovation. We're leading the way in materials, software, hardware, and design processes - with the goal of creating a better, more scalable solution for our growing list of clients."

Established in 2009 in Mackay, Queensland, Australia, iOrthotics develops custom made orthotic devices for podiatrists. The company has embraced digital manufacturing processes and uses their capabilities to create orthotic solutions that offer unique advantages to podiatry clinics and their customers.

In Australia there is a heavy focus on innovation and technology. In 2015 the Australian government announced a \$1.1 billion (AUS) innovation statement to "incentivize, energize, dynamize" the Australian industry. The country's National Innovation and Science Agenda was also aimed at driving smart ideas that create business growth, local jobs and global success.

iOrthotics embraced that mandate, investing hundreds of thousands of dollars in research and development, while also partnering with the University of Queensland to develop its custom orthotic solution. Through the combined effort, iOrthotics is experiencing rapid growth, which in turn benefits the local economy. Unlike other manufacturers who offshore their production, iOrthotics is driving job growth while also providing a much-needed boost to Australia's economy.

Challenge

“The goals for any orthotic device are to support the foot, improve foot function and correct alignment,” says Podiatrist, Ian Goodchild. “The traditional way to make them was using plaster of Paris casts, which is inaccurate and messy. Often the result was an orthotic that was almost unwearable. The industry needed a better solution.”

Traditional techniques for creating an orthotic started with making a mold. Typically, this involved wrapping the subject’s foot in a plaster of Paris cast. This was uncomfortable and intimidating for patients. It was also inaccurate as the molds were typically taken in a non-weight-bearing position. Further it required podiatrists to have a dedicated “wet room” where casts were applied.

Once a mold was created, orthotics were traditionally made using subtractive manufacturing. The product was either milled using a computer numerical control (CNC) router or through heat forming plastics over a positive cast. Both methods required skilled labor and a significant amount of finishing. The process was slow and often required multiple fittings to achieve a satisfactory result. Further, the equipment used in traditional manufacturing, including milling machines and grinders, took up a significant amount of space. Perhaps most importantly, subtractive manufacturing processes were also highly wasteful. It often took 1.5 kilograms of material to create a pair of orthotics that weighed a mere 100 grams.

Solution

“As a rapidly growing business, we needed to innovate our manufacturing process to keep up with demand,” says Mr. Hartley. It was impractical to continue utilising subtractive milling, which could produce just 30 plastic devices per day. With 3D scanning and printing we saw an opportunity to improve the quality of orthotic devices, while also scaling up our production and reducing the waste involved with traditional methods.”

The first step in creating a digital solution was to enable 3D scanning, removing the need for a plaster of Paris mold. Due to recent advancements in technology iOrthotics and their podiatrist customers were able to implement a 3D scanning solution that enables more exact measurement without the challenges of traditional molds. In addition to being less intimidating and messy, this new technology is more portable, allowing the foot to be measured in a more natural position.

Beyond 3D scanning, the team at iOrthotics needed a way to capture the scanned data and convert it into a computer aided design (CAD) file that could be 3D printed. They developed custom software to automate much of the work involved with designing a print-ready orthotic.


Finally, they needed a 3D printing solution that would meet their needs for strength and durability, while also being economically viable. iOrthotics investigated HP’s Multi Jet Fusion technology and found that the materials used and the quality of product it could produce was superior to other methods. In addition, they found that the equipment would take far less space than traditional manufacturing equipment, allowing them to operate more efficiently. Further the speed of production would allow them to meet the growth their business was experiencing.

In late 2017, iOrthotics became the first commercial customer in Australia to acquire an HP Jet Fusion 3D 4200 Printing Solution. Once the machine was in place they had all the tools they needed to completely digitize the workflow involved with making custom orthotics.



“As a rapidly growing business, we needed to innovate our manufacturing process to keep up with demand.”

– Dean Hartley, CIO, iOrthotics.

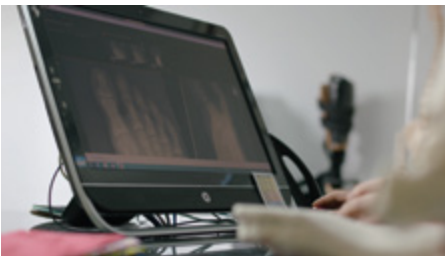

Result

“Our digital workflow requires far fewer steps,” says iOrthotics Technical Development Manager, Thomas Leahy. “We receive a scan from a podiatrist, load it into our custom software, 3D print it, clean it off, glue on a top cover, and we’re done. Traditional manufacturing of orthotics would often take up to 2 weeks from start to finish. We routinely go from scan to shipment in 3-5 days.”

Because of the superior productivity of the HP Jet Fusion 3D printing solution, iOrthotics has been able to triple their output, going from producing 30 orthotic devices per day to producing roughly 90 per day. As demand increases they can add even more capacity. Further, because the new digital workflow is more automated and less labor intensive, iOrthotics can open additional facilities wherever they’re needed, allowing them to scale their business to meet nearly any demand, at home or abroad.

Product quality has also greatly improved. From a materials standpoint, extensive research and testing iOrthotics conducted with the University of Queensland provided empirical evidence that orthotic devices manufactured by HP’s Multi Jet Fusion 3D printing technology were 40-60% stronger than those produced using traditional polypropylene milling.

The design freedom that comes with additive manufacturing has also played a role. The products iOrthotics produces are more flexible and more forgiving. This leads to very positive outcomes for the end users of their products.

Having the ability to customize each orthotic also benefits the podiatrist. iOrthotics is able

to brand each orthotic to the clinic placing the order, helping them market their businesses and maintain relationships with their clients.

“HP Multi Jet Fusion 3D printing technology makes mass customization possible, says Mr. Hartley. “The ability to make customized parts on a large scale creates a paradigm shift. All industries will go through change in the Fourth Industrial Revolution, but perhaps none as dramatically as the manufacturing sector. iOrthotics has transformed itself to take advantage of this technological shift.”

iOrthotics clients and everyone else in the world also benefit from the economic and environmental impact of reduced waste made possible by additive manufacturing. In the orthotics industry, subtractive techniques typically waste 90% or more of the material required to make a finished product. With the unique reusability of the HP Jet Fusion 3D printing solution, iOrthotics calculates that only a minimum % of the material is wasted.

Together, the results of iOrthotics efforts are astounding. With the help of HP’s Multi Jet Fusion 3D printing technology, they’re able to create a stronger, lighter and more accurate product which improves the lives of people with debilitating pain. At the same time, they’ve created a scalable model which can help far more people receive treatment more quickly and less expensively.

But the business model iOrthotics has created also adheres to the mantra of thinking globally while acting locally. Their ability to produce in-country directly benefits their local economy, while the sustainability of their process reduces waste, creating a positive impact for the entire world.

“HP Multi Jet Fusion 3D printing technology makes mass customization possible.”

— Dean Hartley, CIO, iOrthotics.

Customer at a glance

Application

- Insoles

Hardware

- HP Jet Fusion 3D 4200 Printer

Accessories

- HP Jet Fusion 3D 4200 Processing Station with Fast Cooling
- 2 HP Jet Fusion 3D Build Units
- HP Jet Fusion 3D External Tank

Software

- HP SmartStream 3D Build Manager
- HP SmartStream 3D Command Center
- 3MF

HP services

- Next-business-day onsite support¹
- Next-business-day spare parts availability,¹ thanks to HP's global reach
- 3D printing productivity and professional services



Learn more about HP Multi Jet Fusion technology at

hp.com/go/3DPrint

Connect with an HP 3D Printing expert or sign up
for the latest news about HP Jet Fusion 3D Printing:

hp.com/go/3Dcontactus

1. Available in most countries, subject to Terms & Conditions of HP Limited Warranty and/or Service Agreement. Please consult your local sales representatives for further details.

